



Corner Post Fixed Cargo Checklist

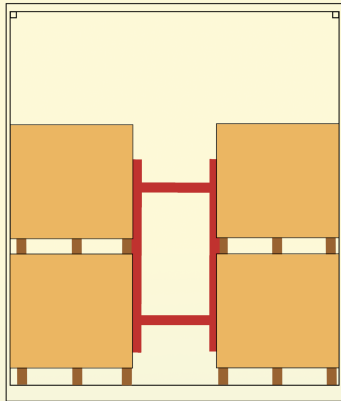


(Front View)

All void spaces within the cargo stow and/or between the cargo and transport unit should be filled

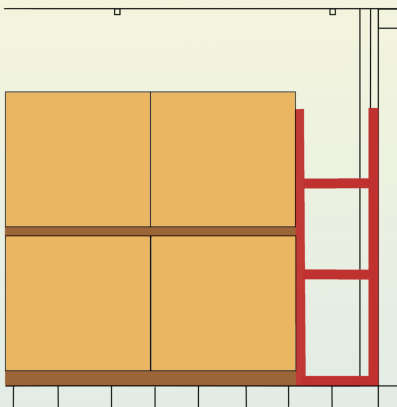

(Side View)

The cargo blocking and bracing should be distributed over a sufficiently large area of the transport unit

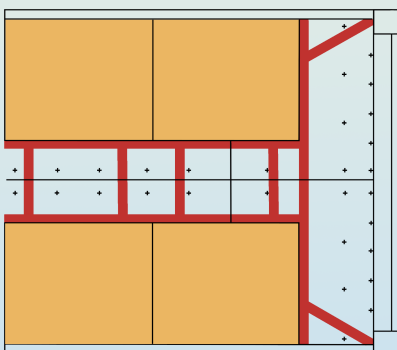

(Top View)


Locking, blocking or lashing should be used to prevent the cargo from sliding and tipping in the transport unit in any direction




Hey, be aware of
“Cargo Stuffing Guidelines”!




Large Cargo Securing Checklist

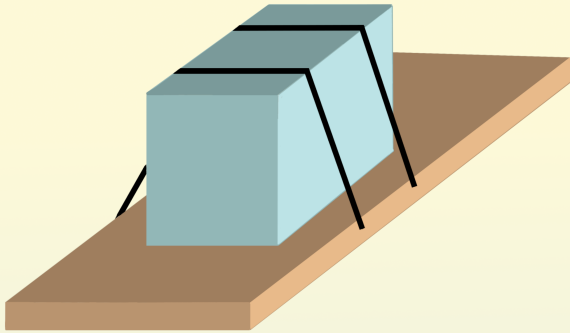


The center of gravity should approximately in the center of the transport unit

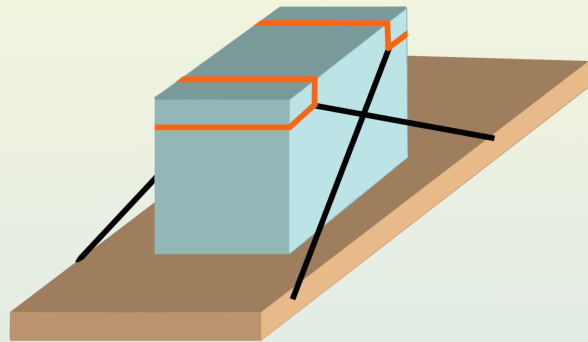

The lashings should secure to the transport unit so as NOT to over-stress its structure

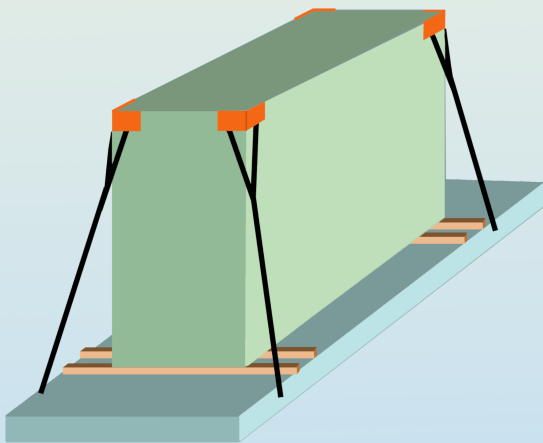

Locking, blocking or lashing should be used to prevent the cargo from sliding and tipping in the transport unit in any direction

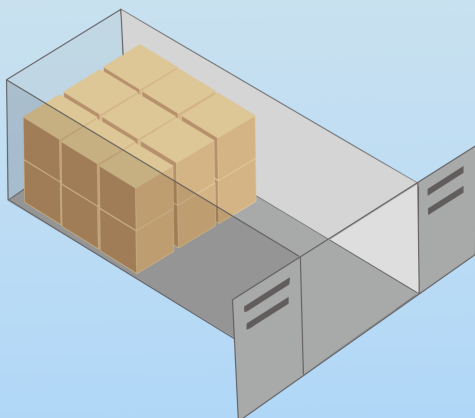

Hey, be aware of
"Cargo Stuffing Guidelines"!

